

SCENARIO TRAINER™


PREPARING HEROES



airBLASTER™
USER MANUAL


QUICK START

Setting up the AirBLASTer™

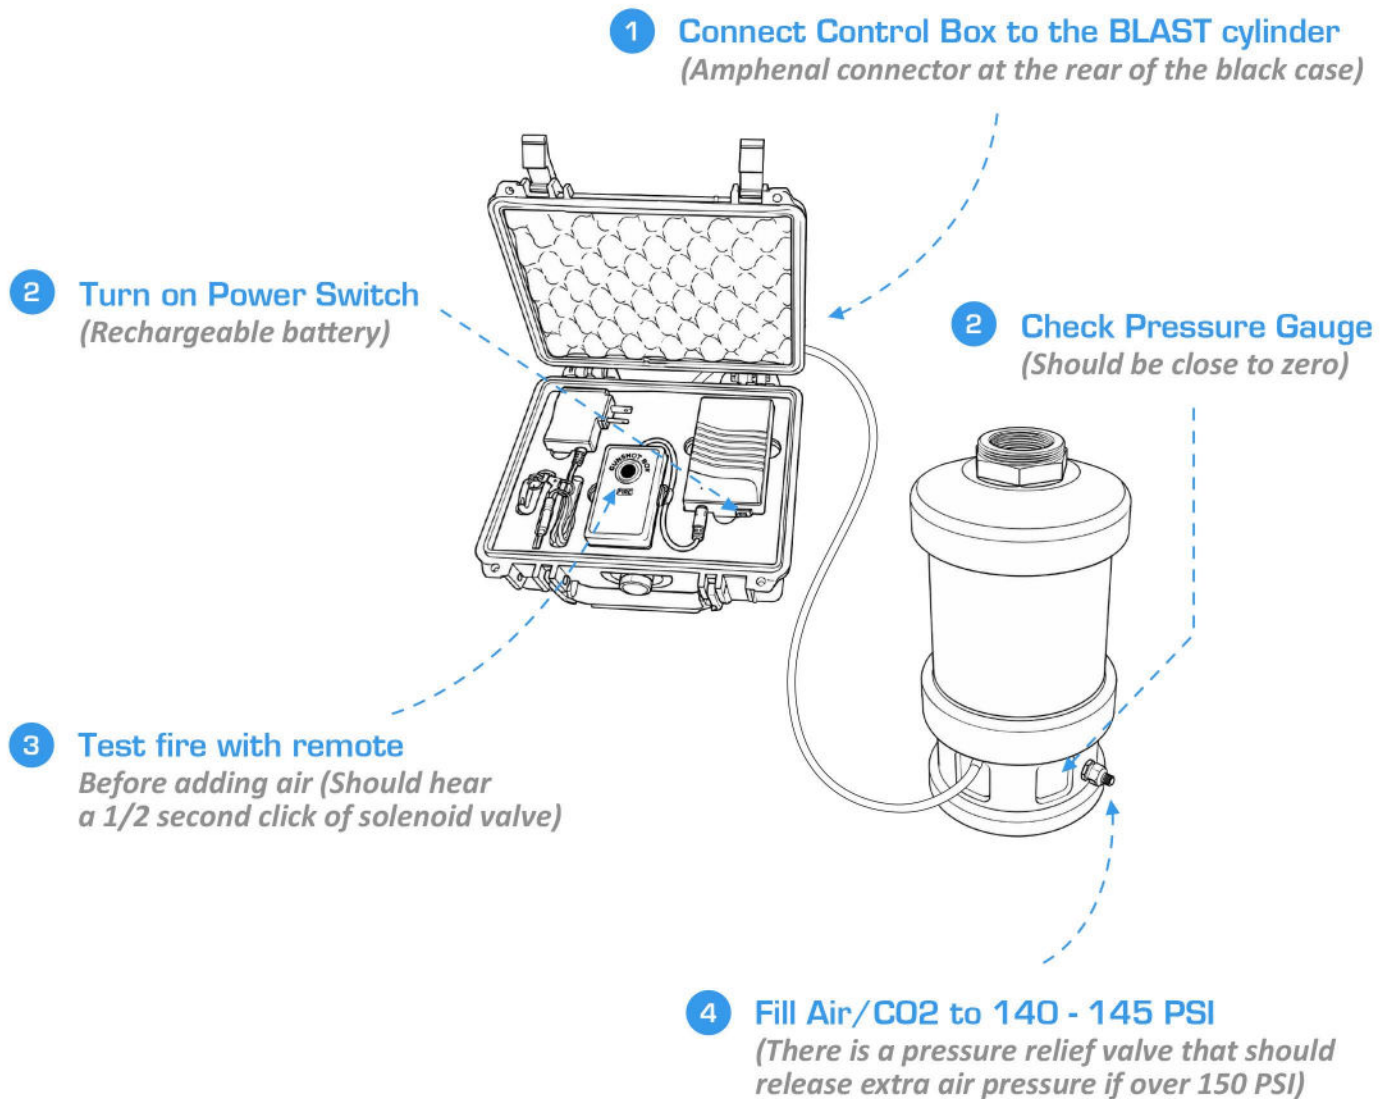


Remote Pairing & Function Test

Test remotes before filling. You should hear a 1/2 sec click from the solenoid when pressing the A button.

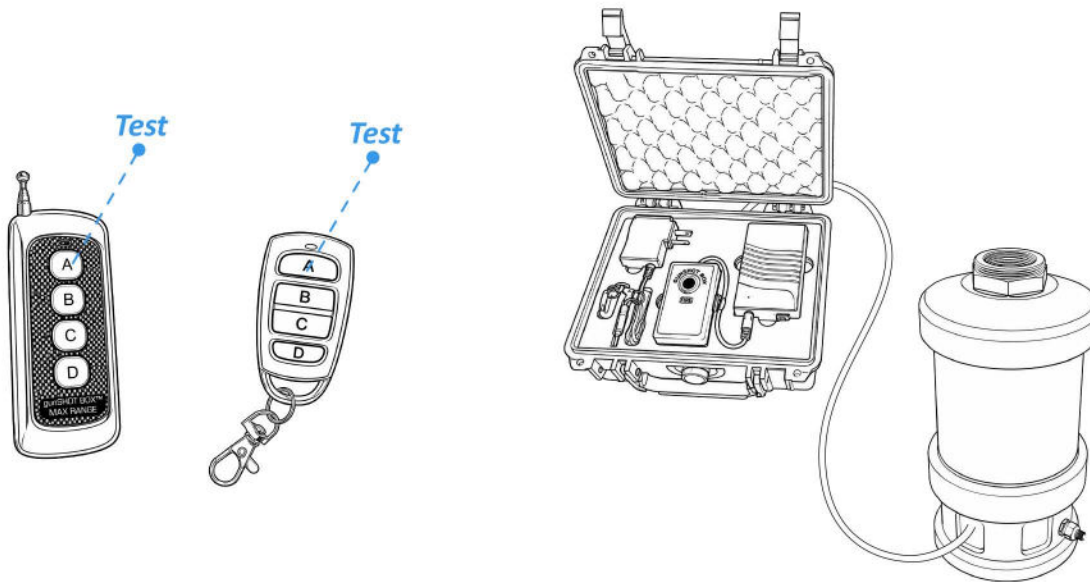


For extended operating distances, the airBLASTer™ can also be used with the optional Max Range Remote. This provides reliable remote operation when greater control distance is required.

Use the Max Range Remote for extended range.

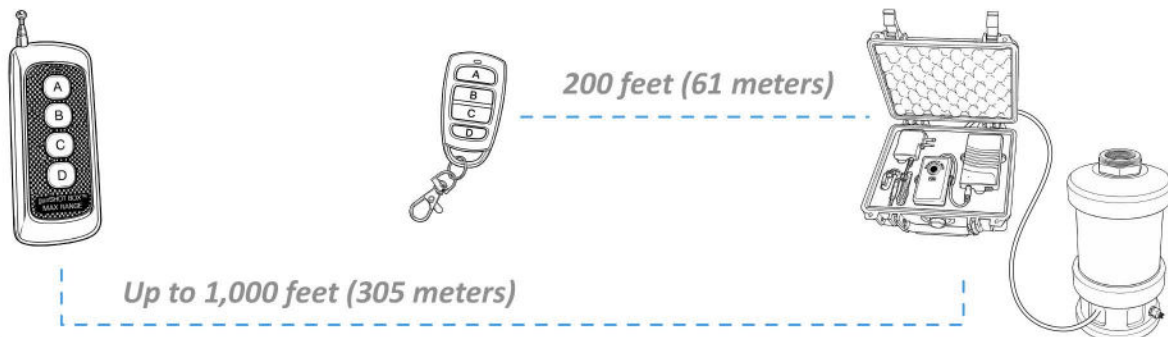


Filling the airBLASTer™


via DeWALT® Air Compressor

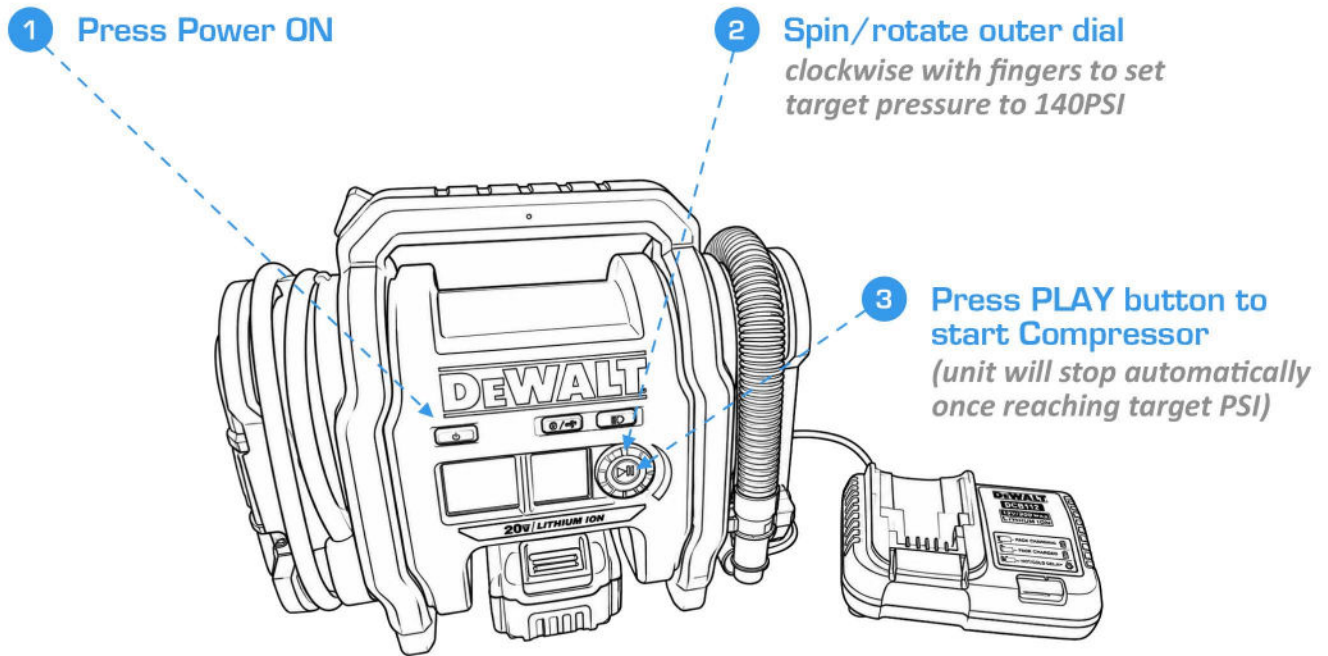

The unit has a bleed off valve that will let excess pressure escape as it approaches 150psi. Max pressure is 150psi [10.3 Bar]

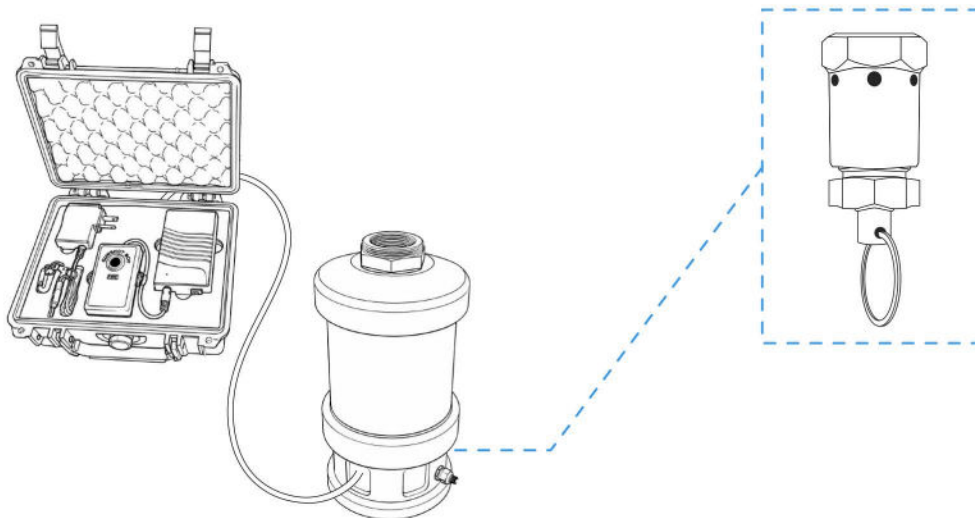

Battery Status & Charging

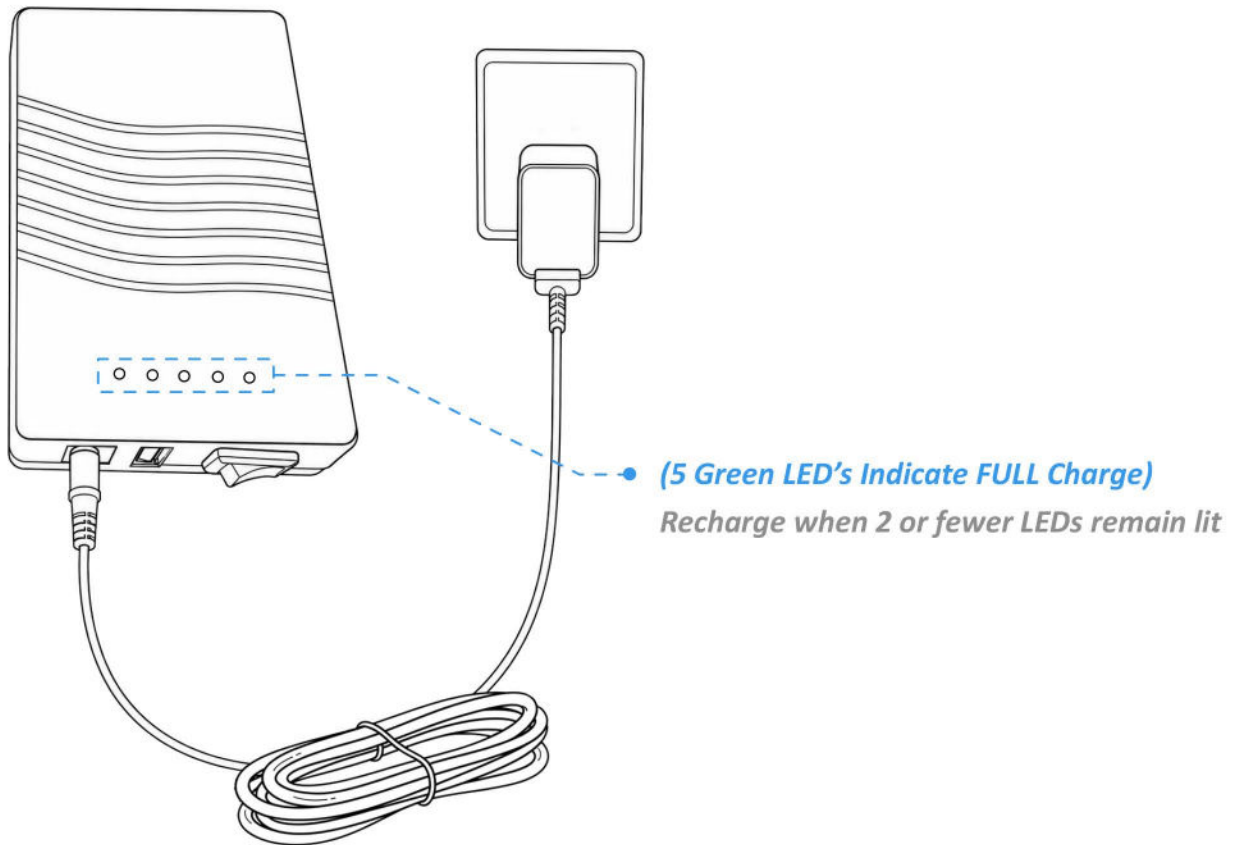


To Charge:

- 1 **Unplug Power Connector from Control Box**
(barrel connector)
- 2 **Connect - Charging Cord**
Expect 40+ uses before needing re-charged

Safety Instructions


Blast Zone Awareness

The airBLASTer™ creates a vertical column of air extending approximately 20 feet (6 meters) directly above the air discharge port. Ensure the area above the unit remains clear of people, objects, and overhead obstructions during operation.

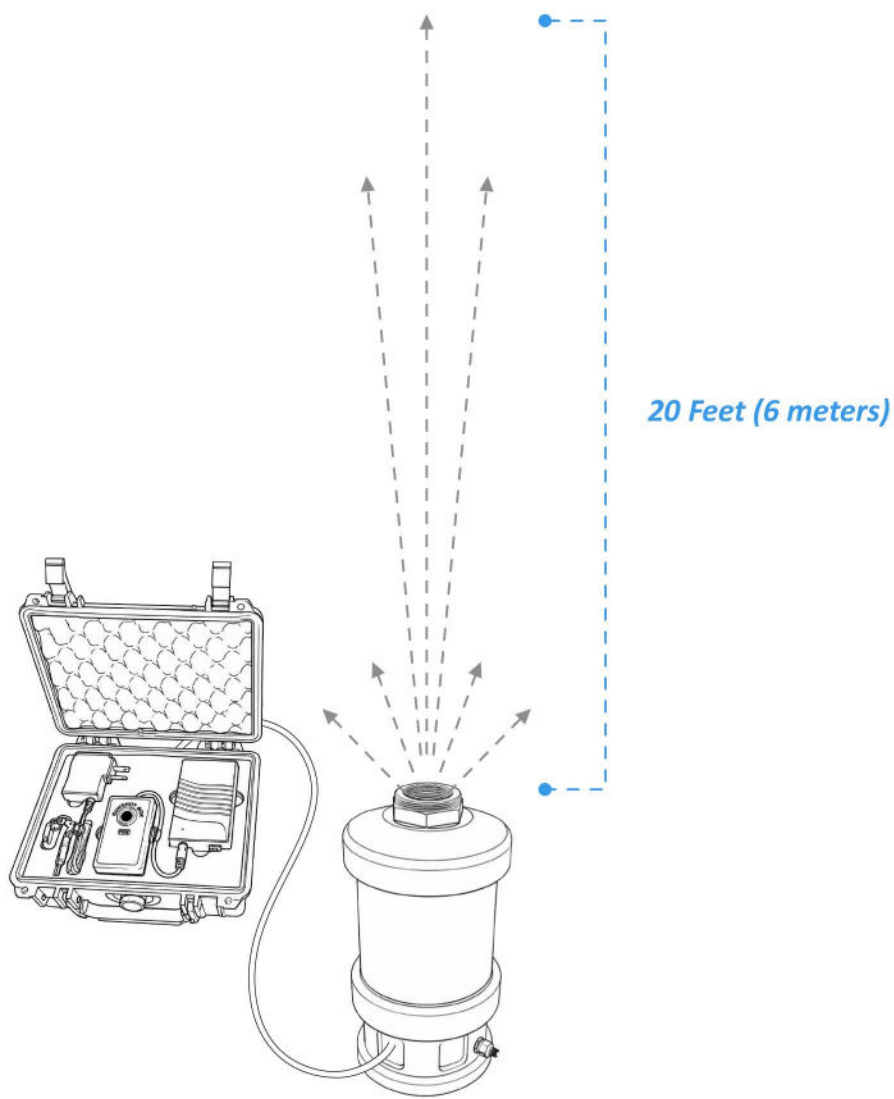


Keep Clear of the Air Port

Always maintain a minimum distance of 1 meter (3 feet) from the air discharge port whenever the unit is pressurized or operating. Never place hands, face, or any part of the body near the port while the system contains pressure.

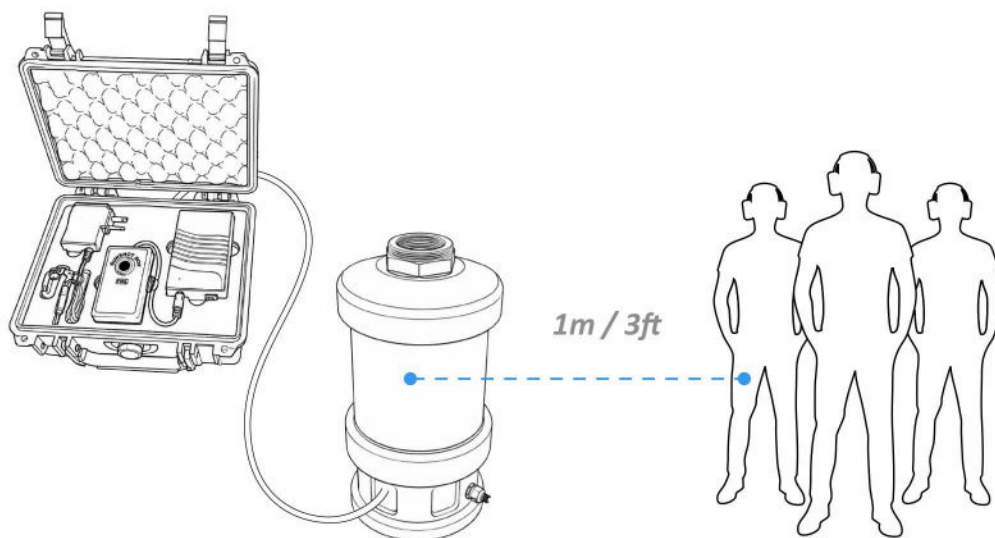


Hearing Protection

Hearing protection should be worn by all personnel operating the airBLASTER™ or working within close proximity during operation.

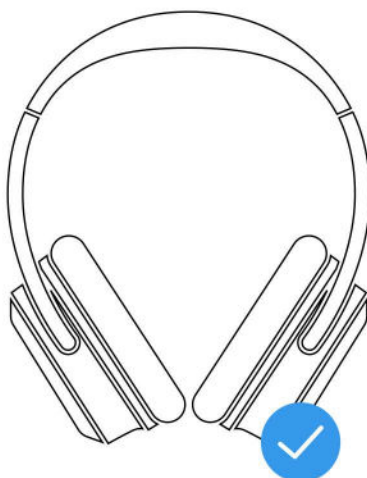

Safe Storage


Before storing, transporting, or performing maintenance on the airBLASTer™.

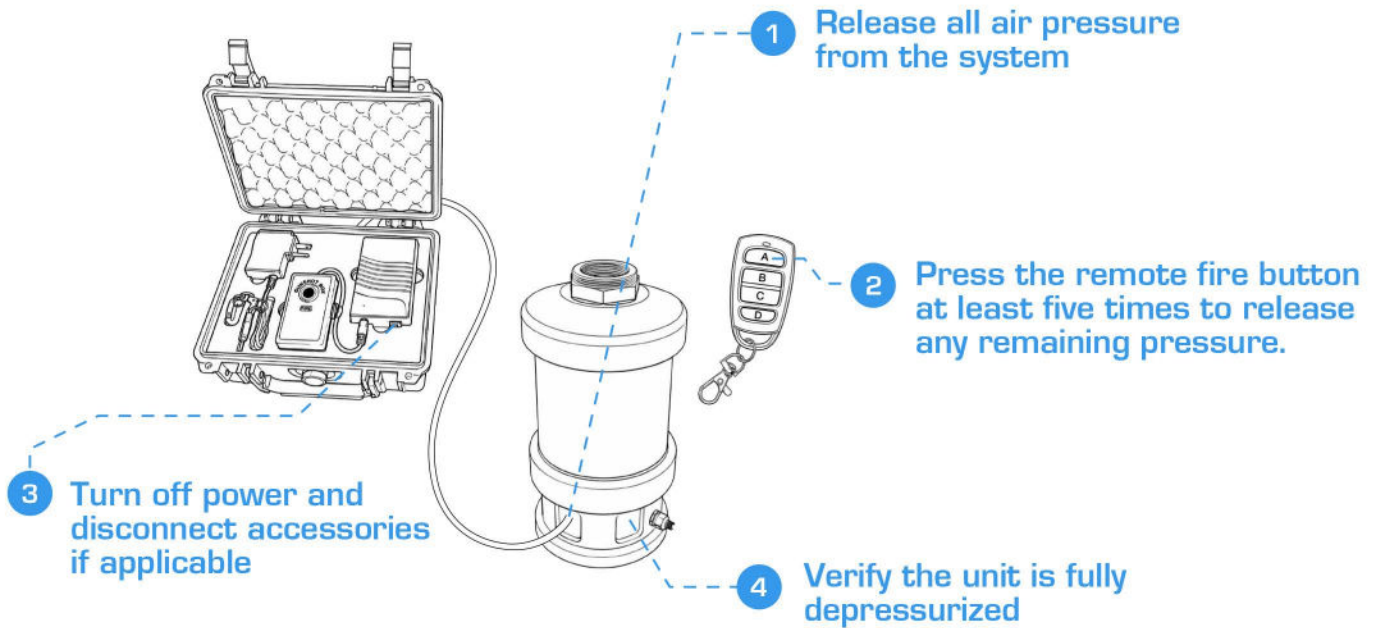

Never put the air blaster into storage while pressurized

Connector Protection

Unit includes a protective cap attached by a retaining chain. When the connector is not in use, always install the cap to help protect the connector from dirt, dust, moisture, and debris.

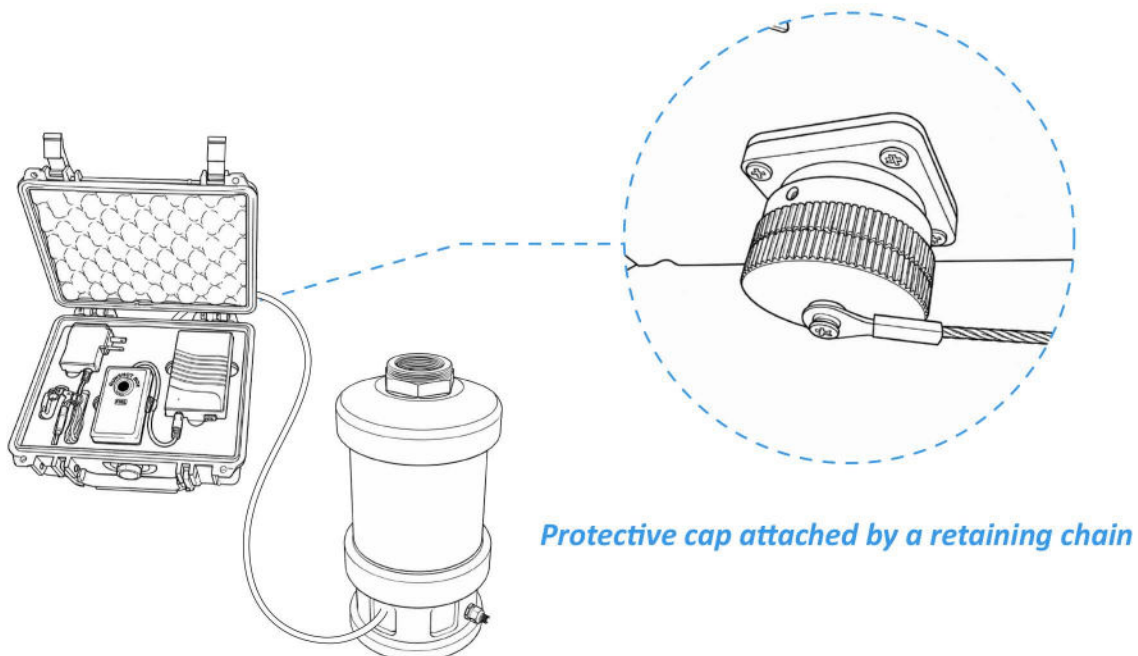


Troubleshooting

Remote Pairing Procedure

- 1 Before filling the unit with air or pressing any button on the remote, ensure the battery pack is turned **off** and verify that the pressure gauge reads 0 PSI.

- 2 Press and hold any button on the remote control

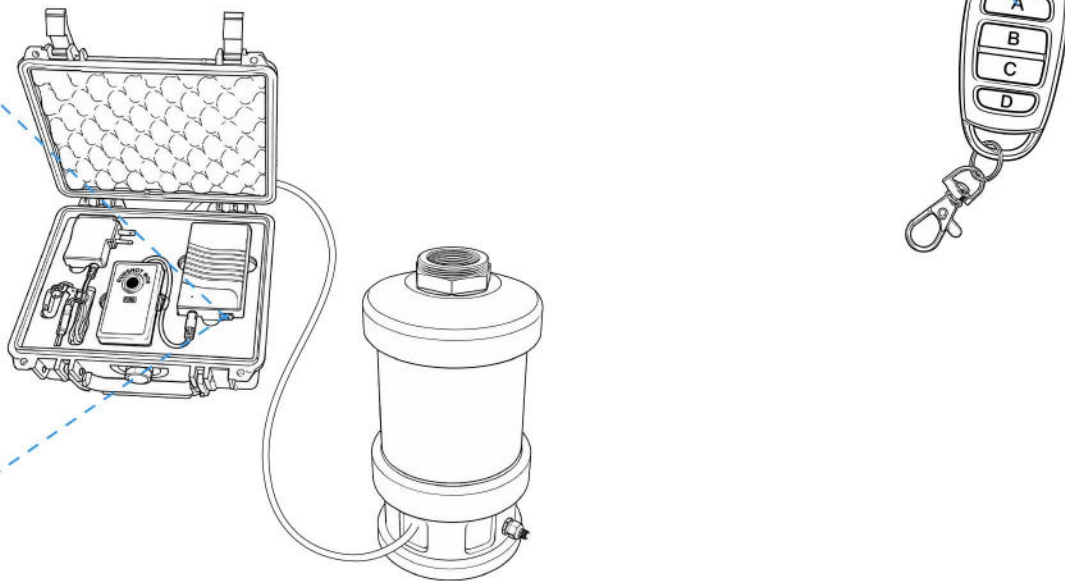

- 3 While holding the button, turn on the control box power (black battery switch)

During the first three seconds after power-up, the control box searches for a broadcasting remote and automatically pairs with it.

Once paired, the unit retains the pairing information even after being powered down.

Warranty & Service

- 1-year warranty included (optional extended service contracts available)
- Scan the QR code below to register and activate your warranty
- Hot swap replacement available

Support

216-925-0025


scenariotrainer.com/support



support



warranty

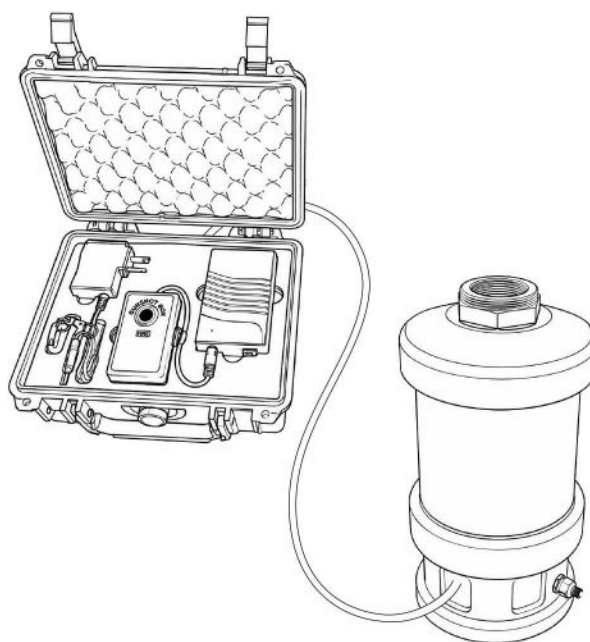

airBLASTer™